


# Bella Sloping Doors

## Right Hand Slope

The following measurements are required:

- \* Height on left and right side
- \* Width of door at bottom
- \* Flat top width if applicable

From this information we will be able to calculate the angle required.

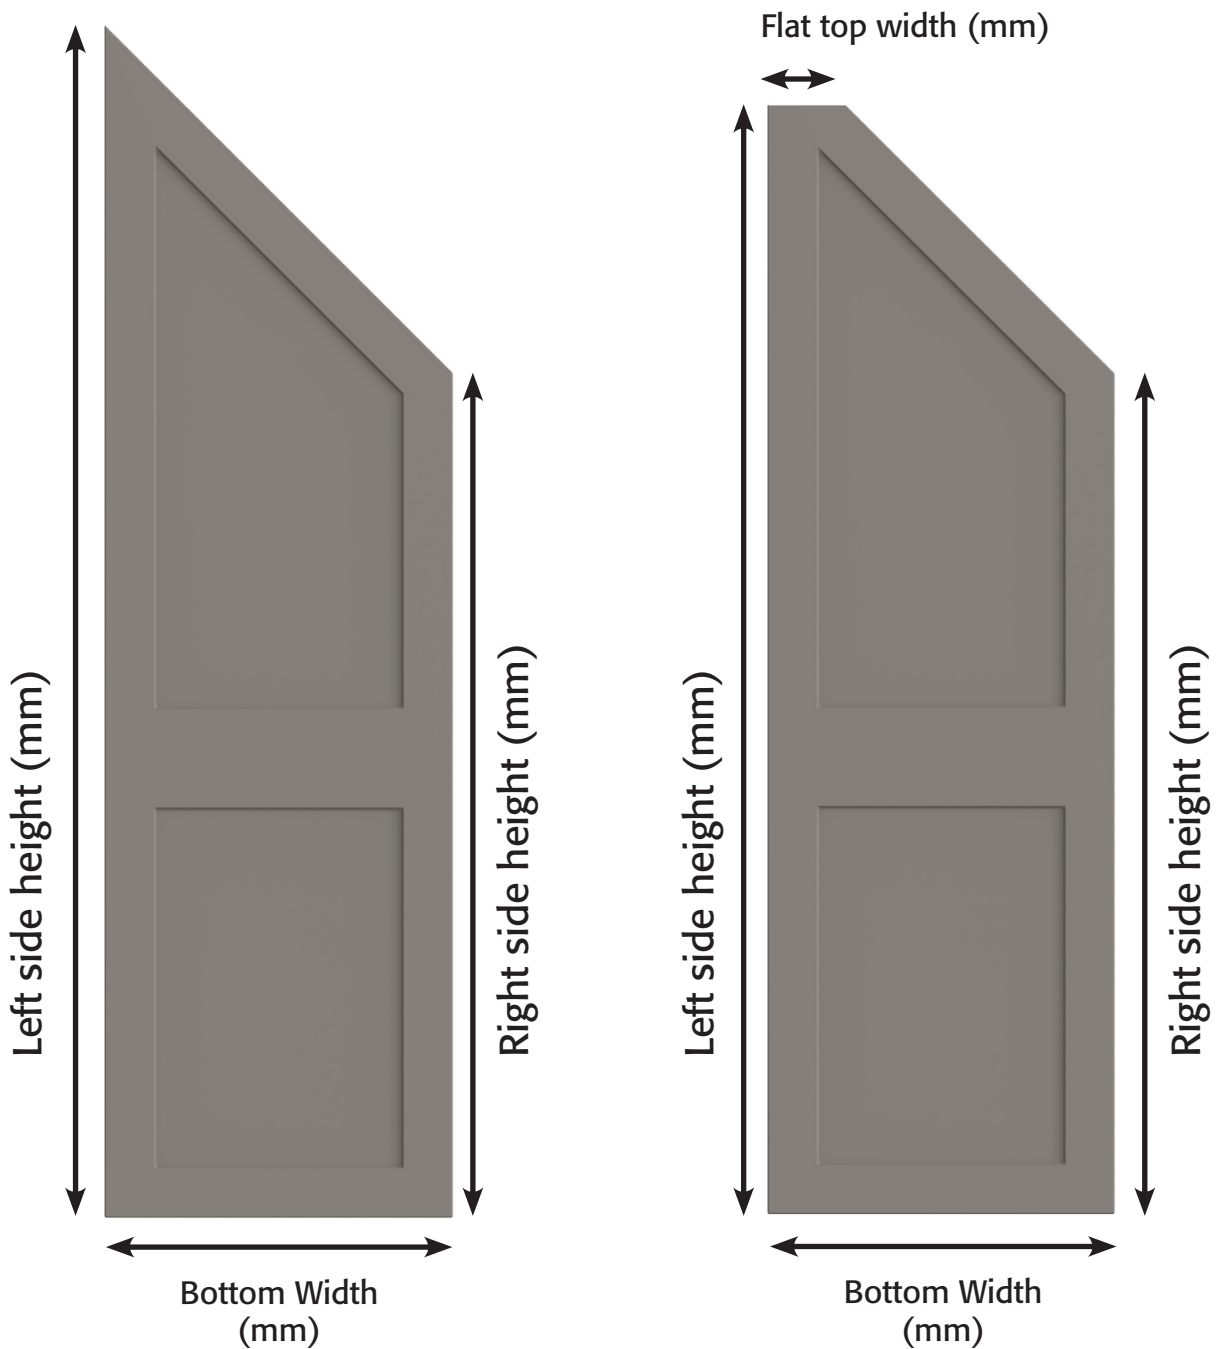

Right Hand Slope

Right Hand Slope with Flat Top